



# Slatz Sign Range Fitting Instructions



## Package Contents:

- Slatz System Faceplate (May include Slider or Interchangeable Slat)
- 2 x Black End Caps
- 4 x Small Wood Screws



- 1) Position each end cap in location and make a surface mark/spot where the holes need to be drilled, ensuring horizontal alignment. (We recommend drilling two holes per end cap, this will prevent the end cap from twisting)



- 2) Drill a suitable size pilot hole to where each spot mark was made. *NB the size of hole will depend on the size of screw and surface you are fixing the sign to, surfaces such as oak and teak can be quite tough, you may wish to drill a slightly larger hole so that the screw does not break at step 3 or 4.*



- 3) Before positioning the Sign in location. Take one of the supplied screws and gently screw into each of the pre-drilled holes. This will create a thread in the wood that each screw can follow making the installation easier when the end caps are in position.



- 4) Re align the end caps over the pre drilled holes and carefully tighten each screw. (Do not over tighten as the plastic may crack or break)



- 5) Once all 4 screws have been tightened, push the faceplate onto the two end caps, Adjust the end caps as necessary for flush fitting against faceplate ends

